


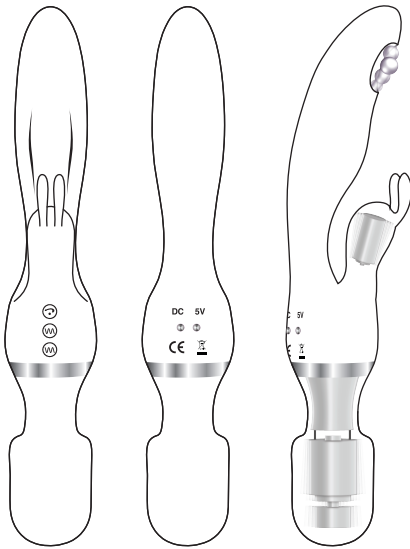

VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



1. Vibrator comes partially charged, but it is recommended to charge it fully before use.
2. Connect the USB plug into the USB port of your computer or other output of V5 charger, and the other end of the DC charger into toy's input.
3. Initial charge takes about 2.5 hours and subsequent charges take about to 3.5 hours
4. Charge lasts for 50 minutes of play time.
5. The LED light will blink while devise is charging. When fully charged, the light remains solid.
6. Charging voltage is DC 5.0 V There is no danger of battery damage by overcharging.
7. Toy vibration will stop completely when battery power depletes.

USB RECHARGEABLE

