


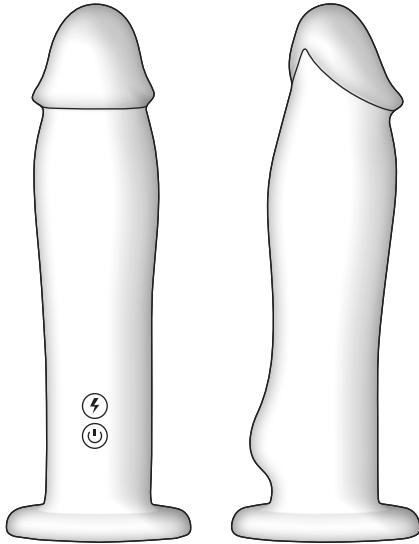

VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the charging compartment.



This device does not arrive to you fully charged, but it is not necessary to charge fully before use.

Connect your toy to a computer or wall USB charger with the USB cable provided.

The indicator light will flash when toy is charging and become solid when the charge is complete.

This device will take up to 1.5 hours to charge completely.

When fully charged, toy will run for approximately 1.5 hours. It emits sound at approximately 40-55 decibels.

Toy vibration will gradually weaken when charge gets low.

There is no danger of 'overcharging' the lithium battery, as the toy has a built-in charging protection circuit. Charging voltage is 3.7V.

USB RECHARGEABLE

