 



Cock Ring

User Manual

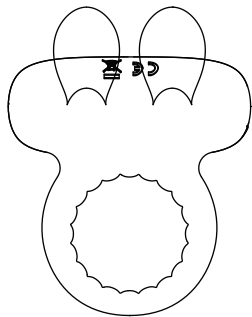


Specifications

Material	Silicone + ABS
Size	3.43*2.69*1.72 in
Net Weight	57.4g
Waterproof	IPX6
Working Frequency	10 frequencies
Working Time	About 35 mins
Noise	< 50db

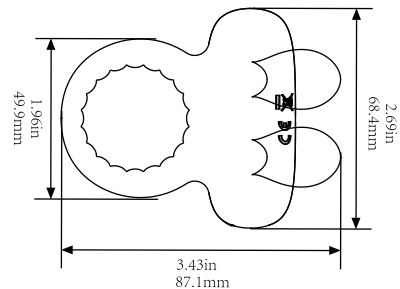 

Button Introduction

 - Press the "⏻" button for 3s to turn round head on/off, press again to change the frequencies, 10 frequencies change cyclically.

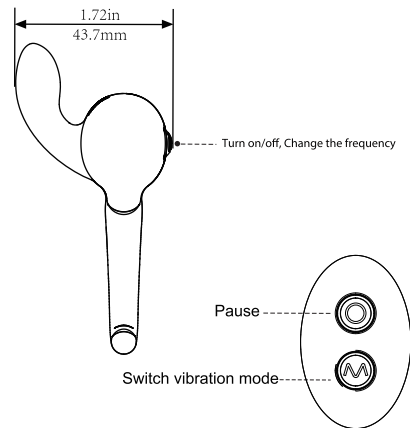

How to Charge

1. Ⓞ is a waterproof charging hole;
2. Please use the charging cable included and insert into the charging hole, While the indicator on, the button flashes, the device starts charging.
3. It takes 40 minutes to fully charge for 35minutes non-stop-play. When fully charged, the indicator stops flash.

Waterproof Charging Hole



Cleaning and Maintain

1. Clean the device with warm water and soap. And then run it through some hot water to wash any traces of soap.
2. Pat it dry with a clean lint-free cloth or a microfiber towel so there is no fluff left on it.
3. Put this product In a dry place, keep the storage environment clean and separate from other materials. away from children s contact range.
4. Don't use alcohol to clean the product, for alcohol would corrode the surface of the product and accelerate its aging process.
5. The product waterproof level is IPX6 and not suitable for playing in the water. For its long service life, don't soak it in the water for a long time.

