



# Renegade


## VIBRATING RECHARGEABLE HEAVYWEIGHT PLUG

### HOW TO PLAY:

Press and hold the Action Button  on the bottom of your Renegade Heavyweight Plug for 3 seconds. You will feel two short vibrations indicating that your Heavyweight plug is turned on. To turn off, hold the  button for 3 seconds. Press the Action Button while the plug is turned on to cycle through 7 different vibrations patterns.

### HOW TO CARE:

Turn off your toy when not in use. Wash after each use with liquid anti-bacterial soap and water. Pat dry with soft, cotton towel and allow to air dry completely.

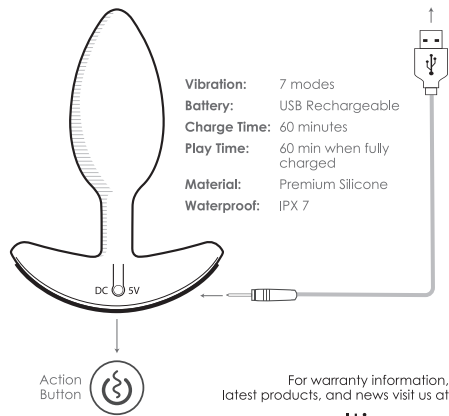

**Vibration:** 7 modes  
**Battery:** USB Rechargeable  
**Charge Time:** 60 minutes  
**Play Time:** 60 min when fully charged  
**Material:** Premium Silicone  
**Waterproof:** IPX 7

For warranty information,  
latest products, and news visit us at

[nsnovelties.com](http://nsnovelties.com)

**nsnovelties**

**Document Name** Renegade Heavyweight Plug User Guide

**Last Modified** 1-3-2019

**Size** 7 cm h x 14.85 cm w

**Format** Accordion Fold

Cut  Fold 

Copyright © 2018 NS Novelties. All rights reserved. The shape and appearance of this packaging and enclosed product is a trademark and trade dress of NS Novelties.