

VIBRATING RECHARGEABLE
EL RAY POCKET STROKER


HOW TO PLAY:

Press and hold **POWER BUTTON** (a) for 3 seconds to turn on your Renegade Explorer Ring. LED light will come on and it will vibrate. Press the Power Button again to cycle through 10 different functions. To turn it off, hold **POWER BUTTON** for 3 seconds.

- LED light will flash while charging and stay solid when fully charged.
- · Do no turn on the product while charging.

HOW TO CARE:

Turn off your toy when not in use. Wash after each use with liquid anti-bacterial soap and water. Pat dry with soft, cotton towel and allow to air dry completely.

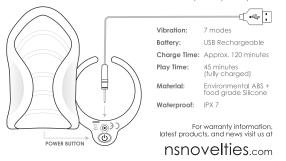

nsnovelties

Document Name Renegade El Ray Pocket Stroker

User Guide

Last Modified 1-9-2019

7 cm h x 14.85 cm w

Format

Size

Bifold

Cut — Fold -----

Copyright © 2019 NS Novelties. All rights reserved. The shape and appearance of this packaging and enclosed product is a trademark and trade dress of NS Novelties.

Fold