

REVOLUTION

EARTHQUAKE



Scan QR
to see my
movement!

For warranty information, latest products, and news visit us at:
nsnovelties.com

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 9.17 x 2.8 x 2.8 (in)
Remote: 3.5 x 1.77 x 1.06 (in)
IPX Rating: Vibe: IPX5, Remote: IPX0
Battery: Vibe: Lithium Polymer,
Remote: AAA
Charge Time: 150 minutes
Run Time: 30 minutes
Modes: 3




PLAY

- * Press & hold power button on device for 2 seconds to enter stand by mode.
- * Quick press power button to activate and to cycle through speeds.
- * Press & hold power button on device for 2 seconds to power on/off.

PLAYING WITH REMOTE

- * To use the remote the device must be powered on.
- * Quick press bottom button to power on/off.
- * Quick press top button to cycle through speeds.

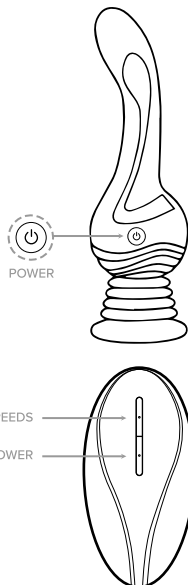

CHARGE

- * After each use, hold device vertically for 3 seconds with DC charging port facing upright.
 - * Tilt the device into a horizontal position then the charging port will align with the silicone door.
 - * Insert pin charger into device to charge.
 - * The light will blink while the device is charging.
 - * The light will become solid once the device is fully charged.
- (DISCLAIMER: DEVICE CONTAINS A ROTATING BALL. IF YOU DO NOT FOLLOW THE INSTRUCTIONS CHARGE PORT MAY NOT ALIGN.)**
- * Please see pictures shown below.

