

Renegade

ALPINE GYRATING PLUG

For warranty information, latest products, and news visit us at:
nsnovelties.com

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 3.86 x 1.38 x 1.38 (in)
Remote: 2.36 x 1.5 x 0.75

IPX Rating: Plug: IPX7, Remote: IPX0

Battery: Plug: Lithium Polymer,
Remote: 23A

Charge Time: Do not exceed 90 minutes

Run Time: 60 minutes

Modes: 16




PLAY

- * Press & hold power button on device for 2 seconds to enter stand by mode.
- * Quick press power button to activate and to cycle through gyrating modes.
- * Quick press vibration button to activate and cycle through vibration modes.
- * Press & hold power button on device for 2 seconds to power on/off.

PLAYING WITH REMOTE

- * To use the remote the device must be powered on.
- * Quick press power button to activate and to cycle through gyrating modes.
- * Quick press vibration button to activate and cycle through vibration modes.
- * Press & hold power button on remote for 2 seconds to power on/off.

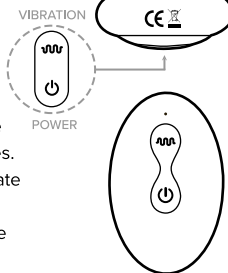

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

