

# INYA

## ENAMOUR RECHARGEABLE RABBIT

For warranty information, latest products, and news visit us at:  
[nsnovelties.com](http://nsnovelties.com)

### CARE

- \* Turn off device when not in use.
- \* Do not operate the device while charging.
- \* Please follow the charge times indicated in the device specifications.
- \* Wash after each use with liquid anti-bacterial soap and water.
- \* Pat dry with a cotton towel and allow to air dry completely.

**Product Dimensions:** 9.29 x 1.47 x 1.42 (in)  
**IPX Rating:** IPX5 Low pressure water resistant  
**Battery:** Rechargeable  
**Charge Time:** Do not exceed 150 minutes  
**Run Time:** 50 minutes  
**Modes:** 9



### PLAY

- \* Press and hold vibration button for 3 seconds to power on/off.
- \* Quick press vibration button to cycle through vibration speeds/patterns.
- \* Press and hold thrust button to power on/off.
- \* Quick press and cycle through thrust function.
- \* Press and hold air pulse button to power on/off.
- \* Quick press to cycle through speeds.

VIBRATION  
THRUST  
AIR PULSE



### CHARGE

- \* The light will blink while the device is charging.
- \* The light will become solid once the device is fully charged.

