


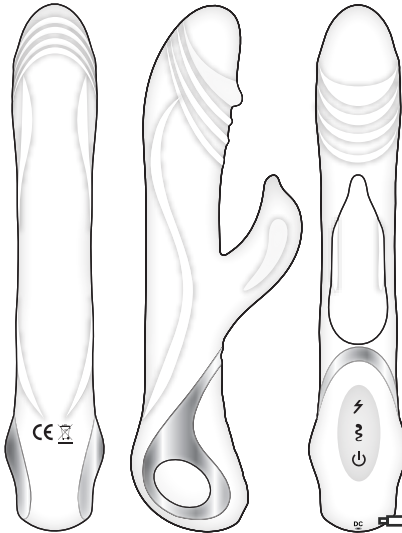

VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS

Vibrator arrives with a 60% charge. It is not necessary to charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. The toy operates at 3.7 volts and uses a lithium polymer battery.

Initial and subsequent charges take about 2 hours to complete.

The light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging.

Charge lasts for 60 minutes of play time at the highest setting, and about 2 hours at lower settings.

This toy has 7 speed and vibration functions, 3 rotation functions and one 'turbo charge' or 'crazy moment' feature.

This toy operates at a 50-60dB sound level.

Toy vibration stops completely when battery power depletes to a level below 2.4V.

