



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS: This vibrator arrives with a partial charge, so you may use it without fully charging, or fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 1 hour, and subsequent charges also take about 1 hour to complete.

The indicator light on the interior of the toy will remain lit while device is charging. There is no danger of battery damage by overcharging.

Charge lasts for about 50 minutes of play time on the lowest vibration setting, and about 40 minutes on the highest vibration setting.

Toy vibration slows before stopping completely when charge is low.

The sound level of this toy is less than 57db.

INSTRUCTIONS FOR USE: This toy has 5 buttons in total. Buttons 1, 2 & 3 control the big motor in the main shaft, while buttons 4 & 5 control the small motor in the clitoral piece.

There are two power buttons on this toy, one for the big motor in the main shaft, and one for the small motor in the clitoral piece. Look for the universal 'power on' symbol above the words 'rotation' and 'vibration.' Press either or both power buttons for at least two seconds to start each motor.

Once the big motor is turned on, the R/S button at the top will cycle through 4 frequencies of vibration, as well as control the clockwise or counter-clockwise rotation of the main shaft.

To turn off the main shaft motor, press the button below the word 'rotation.'

Once the small motor is turned on, its same power button can be used to cycle through 8 different frequencies of vibration.

To turn off the clitoral piece small motor, press the button below the word 'vibration.'

USB RECHARGEABLE

