




VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



This vibrator arrives with a 70% charge, so it is not necessary to charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. The toy charges at 5V and operates at 3.7 volts, using a lithium polymer battery.

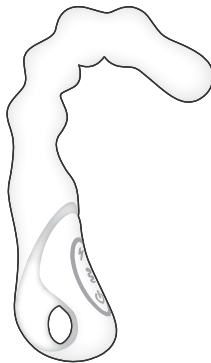

Initial charge will take about 2 hours, and subsequent charges also take about 2 hours to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging.

Charge lasts for about 4 hours of play time at the lowest level and about 2 hours at the highest level.

This toy operates at a 50-60dB sound level.

Toy vibration stops completely when battery power depletes to a level below 2.4V.

USB RECHARGEABLE

