



Product Specifications:

Category: Vibrator User: Women Material: ABS

Finish: Rubber spray oil Size: 21mm*21mm*102mm Battery: 601525.170 mA Voltage: 3.7V

Number of Vibrations: 10 Vibrations User time: 50minutes Sound Level: 50db

CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, so it is recommended to charge it fully before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about an hour, and subsequent charges also take about an hour to complete.

The indicator light(s) will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 50 minutes of play time. This toy comes with a rechargeable battery, operates at DC3.7V and has a sound level of 50db.

INSTRUCTIONS FOR USE

This toy has a 1-button control at its base.

Press the button for at least 2 seconds to turn the toy on.

Press again to cycle through 10 vibration frequencies. The first 3 frequencies are constant speeds, followed by vibration patterns.

Press the button for at least 2 seconds to turn the toy off.