



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge, so it is recommended to fully charge before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 90 minutes and subsequent charges will take about 150 minutes to complete.

The indicator light will be on while device is charging, and turn off when toy is fully charged.

There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 90 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level.

This toy operates at a sound level of 60 db with an 900mAh battery, at a voltage of 3.7V.

INSTRUCTIONS FOR USE

Use the middle Power Button to turn the toy on by pressing it for at least 3 seconds.

Press the upper Function Button to activate the thrusting rotation function. Press the button again to switch between 10 different vibration speeds and 3 different thrusting rotation speeds that operate together. Hold this button down for at least 3 seconds to turn off the thrusting rotation without turning off the vibration.

USB RECHARGEABLE



Press the lower Function Button to activate the clitoral stimulator shaft. Press the button again to switch between 10 different vibration speeds and functions. Hold this button down to turn for at least 3 seconds to turn the clitoral stimulator shaft motor off.

To turn toy off, press middle Power Button for at least 3 seconds.