

zerotolerancetoys.com

**ZERO TOLERANCE**



**Product Specifications:**

Material: Silicone + ABS  
Battery: USB Rechargeable  
Voltage: 3.7V  
Number of Vibrations: 7 modes  
User time: about 60 minutes  
Sound Level: ≤60dB

**CHARGING INSTRUCTIONS**

This vibrator arrives partially charged, so it is recommended to charge it before first use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 1 hour, and subsequent charges will take about 2 hours to complete. The LED lights will flash on the toy or the remote while devices are charging, and remain solid when fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 80 minutes of play time on the lowest vibration level, and about 50 minutes of play time on the highest level.

When the product is operating at a voltage too low for full use, the LED light button will quickly flash 6 times, the toy will deflate, and power off automatically.

This toy operates at a sound level of <60db and a power level of 3.7V.

**INSTRUCTIONS FOR USE**

This toy can be operated with or without the remote control.

**WITHOUT THE REMOTE CONTROL**



Turn the toy on by pressing the Power Button for at least 2 seconds.

Use the same Power Button to cycle through 7 speeds and functions of vibration. The vibration and inflation functions operate simultaneously.

Only the remote control can operate the inflation function separately.

Turn the toy off by pressing the Power Button for at least 3 seconds.

You can start the toy without the remote control, and then control it from the remote control after turning the remote on separately.

**WITH THE REMOTE CONTROL**

Turn the toy on by pressing the Power Button on the remote for at least 3 seconds. Use the same button to cycle through 7 speeds and functions of vibration.

Use the Four Arrows Button to activate the inflation function. Press it for at least 2 seconds to activate 'quick-max' mode which inflates the balls to their maximum size all at once. Once the balls are inflated to their maximum size, short presses will deflate incrementally. To inflate incrementally, press the Four Arrows Button more quickly to reach the desired size.

Turn the toy off by pressing the Power Button for at least 3 seconds.

You can start the toy directly with its Power Button, and then control it from the remote control after turning the remote on separately.



**USB RECHARGEABLE**

