

CHARGING INSTRUCTIONS

INSER CHARGER

HERE

-

This vibrator arrives with a partial charge, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. The DC charger input of this toy is located below the control panel area near the curved base of the toy. Initial charge will take about 1 hour, and subsequent charges will take about 2 hours to complete.

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for

long periods of time. Charge lasts for about 2.5 hours of play time on the lowest

level of vibration, and about 1.3 hours on the highest level. Vibration intensity decreases as the battery charge depletes. This toy operates at a sound level of less than 50db with a rechargeable 500mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 2-button control at the back of the thicker head.

To turn on both motors, press the bottom Power Button for at least 2 seconds. This will put both motors in standby mode. The lights will turn on and motors are ready for operation.

Once the toy is on and in standby, press the bottom Power Button again more quickly to cycle through 10 speeds and functions in the double-bulb smaller shaft. It will begin at its first lowest speed.

Its first iowest speed. Once the toy is on and in standby, use the top Function Button to cycle through 10 speeds and frequencies in the bigger, thicker head. It will begin at its first lowest speed. To turn off both motors, press the bottom Power Button for at least 2 seconds.

1

USB RECHARGEABLE