

Product Specifications:

Material: ABS+Silicone Battery: 701535-220mAh

Voltage: 3.7V

Number of Vibrations: 10 User time: 60 Minutes Sound Level: 50 Dbs

CHARGING INSTRUCTIONS
This vibrator arrives with a partial charge of about 50% so it is recommended to charge fully before use.
To charge, connect the USB plug into the USB port of your computer or other output and the double magnetic prong end of the DC charger into input at base of toy.

Initial charge will take about 2 hours and subsequent charges will take 99 minutes to complete

Initial charge will take about 2 hours and subsequent charges will take 99 minutes to complete.

The indicator light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time at the highest level of vibration and about 90 minutes at the lowest level.

This toy operates at a sound level of between 50dh with a

This toy operates at a sound level of between 50db with a rechargeable 220mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE



CHARGER HERE