
 


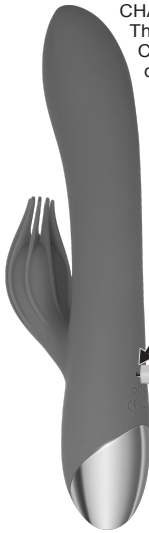

## VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



### CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. The DC charger input of this toy is located at the back of the toy just above the chrome base.

Initial charge will take about 2 hours, and subsequent charges will take about 1.5 hours to complete. The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 65 minutes of play time on the lowest level of vibration, and about 45 minutes on the highest level.

Vibration intensity decreases as the battery charge depletes.

This toy operates at a sound level of less than 50db with a rechargeable li-on Polymer battery at 3.7V.

INSERT  
CHARGER  
HERE

USB  
RECHARGEABLE

### INSTRUCTIONS FOR USE

This toy has a convenient 2-button control at its base.

To turn on both motors, press the bottom Power Button for at least 2 seconds. This will put both motors in standby mode. The lights will turn on and motors are ready for operation.

Once the toy is on and in standby, press the bottom Power Button again more quickly to cycle through 10 speeds and functions in the main shaft. It will begin at its first lowest speed.

Once the toy is on and in standby, use the top Function Button to cycle through 10 speeds and frequencies in the clitoral stimulator/tickler. It will begin at its first lowest speed.

To turn off both motors, press the bottom Power Button for at least 2 seconds.