

<http://www.genderx.com/>

GENDERX



Product Specifications:

Material: Silicone+ABS

Battery: lithium Battery

Voltage: 3.7 V

Number of Vibrations: 10
vibrating patterns

User time: About 50 minutes

Sound Level: < 55dp

CHARGING INSTRUCTIONS: This vibrator arrives with low partial charge, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the charger onto the magnetic pins on the toy, located near the power button. The charger will click into place.

Initial charge will take about 25 minutes and subsequent charges will take about 65 minutes to complete.

The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 70 minutes of play time on the lowest level of vibration, and about 50 minutes on the highest level.

This toy operates at a sound level of less than 55db with a lithium battery at a voltage of 3.7V. The remote control is not rechargeable. It uses a CR2032 call battery, included. Remote distance is 10 meters, about 32 feet.

INSTRUCTIONS FOR USE: This toy can be operated directly with the button on its back panel, or with the button on the remote control. Important note: You cannot turn the toy ON or OFF with the remote control. Use the button directly on the toy to power it on.

OPERATING TOY DIRECTLY

Press the Power Button on the back panel of the toy for at least 3 seconds to turn toy on.

Press the Power Button again more quickly to cycle through 10 different vibration speeds and functions.

Once the toy is on, you may power on the remote control and use its button to operate vibrations and functions remotely.

To turn toy off, press Power Button for at least 3 seconds.

OPERATING WITH REMOTE CONTROL

Once the toy is on (by using the button on the back panel of the toy), press the Power Button for at least 3 seconds to turn on the remote control.

Use the Power Button again to cycle through 10 different vibration speeds and functions.

Press the Power Button again for 3 seconds to turn off the remote control, which will put the toy in standby mode. The toy must be turned off directly with its own button. However, after 20 minutes in standby mode, the toy will power off automatically by itself.



ATTACH USB
CHARGER
TO PRONGS

USB RECHARGEABLE

