

Product Specifications:

Material: Silicone+ABS Battery: Rechargeable Li-ion battery 170mAh Voltage: 3.7V Number of Vibrations: 7 User time: 40 mins on High, 60 mins on low

Sound Level: <60DB

CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge of about 30%. It is recommended to use up this energy and then charge battery completely the first three times to maximize battery life.

To charge, connect the USB plug into the USB port of your computer or other output and the magnetic DC charger into the two magnetic pins at the toy's base.

nagneric pins at the toy's base.
Initial and subsequent charges will take about 30 minutes to complete.
The indicator light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 40 minutes of play time at the highest level of vibration and about 60 minutes at the lowest level.

This toy operates at a sound level of 60db and lower with a rechargeable 170mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at its base.

To turn toy on, press the Power Button for at least 3 seconds. The lights will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 7. ATTACH USB CHARGER TO PRONGS

To turn toy off, press Power Button for at least 3 seconds.

USB RECHARGEABLE