



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS

This vibrator arrives with a low partial charge, so it is recommended to charge fully before use.

To charge, connect the USB plug into the USB port of your computer or other output and the magnetic DC charger into the two magnetic pins at the toy's base.

Initial and subsequent charges will take about an hour to complete.

The indicator light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about an hour of play time at the highest level of vibration and about 90 minutes at the lowest level.

This toy operates at a sound level of less than 50db with a rechargeable 160mAh lithium battery at 3.7V.

USAGE INSTRUCTIONS

This toy has a convenient 1-button control at its base.

To turn toy on, press the Power Button for at least 3 seconds. The lights will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 10.

To turn toy off, press Power Button for at least 3 seconds

INSERT
CHARGER
HERE



USB RECHARGEABLE