

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: Silicone, ABS plastic
Battery: Main unit: Li-polymer 3.7V battery 170mAh,
Remote: Li-polymer 3.7V battery 50mAh
Voltage: 3.7V
Number of Vibrations: 10
User time: 100mins on max
Sound Level: ≤50db

CHARGING INSTRUCTIONS

This vibrator arrives with a high partial charge of about 70%, so it is not necessary to charge before use.

To charge, connect the USB plug into the USB port of your computer or other output and the magnetic DC charger into the two magnetic pins at the toy's base.

Initial charge will take about 30 minutes, and subsequent charges will take about 80 minutes to complete.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 90 minutes of play time at the highest level of vibration and about 120 minutes at the lowest level.

This toy operates at a sound level of 50db with a rechargeable 170mAh lithium battery at 3.7V. Charging voltage is 5V.

The remote control operates with a rechargeable 50mAh lithium battery at 3.7V. Charge the remote control by plugging the USB magnetic DC charger into a power source and the magnetic pins at the back of the remote.

INSTRUCTIONS FOR USE

This toy has two convenient 1-button control panels - one at the base of the toy and one on the remote control.

To turn the toy on, press the button directly on the toy for at least 2 seconds. The light will go on and the toy will begin vibrating at its lowest frequency. Press the button again more quickly to cycle through 10 vibration speeds and functions.

To engage the remote control, make sure the toy is already on by pressing the button directly on the toy, then turn on the remote by pressing its button

for at least 2 seconds. Press again more quickly to cycle through 10 vibration speeds and functions.

To turn off the remote, press its button for at least 2 seconds. Turn off the toy itself by pressing its button for at least 2 seconds.

