

Product Specifications:

Material: Silicone, ABS & Stainless Steel Battery: Built- in lithium battery, 602030 Voltage: DC 3.7v Number of Functions: 10 User time: About 1.5~2 hours ound Level: ≤60DB

CHARGING INSTRUCTIONS

This toy arrives with a partial charge, so it is recommended to charge fully before first use.

To charge, connect the USB plug into the USB port of your computer or other output and the DC charger into the port below the toy's power button on its front face.

Initial and subsequent charges will take about 2 hours to complete.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 2 hours of play time on the lowest level of vibration and about 1.5 hours on the highest level.

This toy operates at a sound level of less than 60db with a rechargeable lithium battery at 3.7V.

INSTRUCTIONS FOR USE

USB

INSERT

HERE

RECHARGEABLE

CHARGER

This toy has a convenient 1-button control

embedded into the chrome-finished plastic plate at its front.

To turn toy on, press the button for at least 2 seconds. The light will turn on and toy will begin tapping at its first lowest frequency.

Press the button again more

quickly to cycle through 10 speeds - a single time for each new speed or function. To turn toy off, press button for at least 2 seconds.