

Product Specifications:

Material: Silicone

Battery: Lithium battery Voltage: 3.7V

Number of Vibrations:

10 speeds

User time: 60-70 minutes Sound Level: Less than 50 db

CHARGING INSTRUCTIONS

This toy arrives with a low partial charge, so it is recommended to charge fully before using.
To charge, connect the magnetic USB cable into the USB port of

your computer or other output and the charger's pins onto the pins at the base of the toy.
Initial charge will take 2 hours and subsequent charges will take about 90 minutes to complete.
The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods

Charge lasts for about 1 hour of play time at the highest level of vibration and about 70 minutes at the lowest level.

This toy operates at a sound level of less than 50db with a rechargeable lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at the side of its base.

To turn toy on, press the button for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the button again, a single time for each new speed or function for a total of

CHARGER TO PRONGS

ATTACH USB To turn toy off, press button for at least 3 seconds.

