

Product Specifications:

Material: Silicone & ABS Plastic Battery: 16240 450mAH

Voltage: 3.7V

Number of Vibrations: 5 User time: 60 minutes Sound Level: 60dB

CHARGING INSTRUCTIONS

This toy arrives with a partial charge of between 30% - 50%, so it is advised to fully charge it before first use.

To charge, connect the toy's USB plug (at its base under the pop-off white cap) directly into the USB port of your computer or wall outlet adapter. Initial and subsequent charges will take about an hour to complete. The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

 
Charge lasts for about 90 minutes of play time on the lowest level of vibration and about 60 minutes on the highest level.

This toy operates at a sound level of less than 60db with a rechargeable 450MAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at the side of its base.

To turn toy on, press the button for about 2 seconds. The light will turn on and toy will begin vibrating and thrusting at its first lowest frequency. Both motors work together.



of thrusting & vibration.
To turn toy off, press
button for about 2

seconds.

REMOVE CAP AND INSERT USB CHARGER INTO PORT