

## **Product Specifications:**

Material: Aluminum(body)+ Power Button( Silicone Made) (with a silicone sucker) Battery: Capacity :330mAH build-in, LI-polymer Battery Voltage: 3.7v

Number of Vibrations: 7 User time: 30 minutes Sound Level: less 50db

## CHARGING INSTRUCTIONS

This toy arrives with a low partial charge, so it is recommended to fully charge before use.

To charge, connect the USB plug into the USB port of your computer or other output and the DC charger magnetic charging

computer or other output and the DC charger magnetic charging end onto the pins at the base of the toy.
Initial charge will take about an hour and subsequent charges will take about 2 hours to complete.
The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 1.5 hours of play time at the highest level of vibration and about 2 hours at the lowest level

hours at the lowest level.

This toy operates at a sound level of less than 50db with a rechargeable 330mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at its base.

To turn toy on, press the button for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the button again, a single time for each new speed or function for a total of 7. To turn toy off, press button

for at least 3 seconds.

ATTACH USB CHARGER TO PRONGS

**USB RECHARGEABLE**