

CHARGING INSTRUCTIONS

This stroker arrives pre-charged with about 75% capacity, so it may be used

Ihis stroker arrives pre-charged with about 75% capacity, so it may be used immediately without charging first. To charge, connect the USB plug into a power source and the DC charger end into the port at the top of the toy. Pull up silicone flap marked DC to expose the charging port. The toy needs to be in a horizontal position to charge. Please note that the charging port will not line up when the toy is in a vertical position. To line up the charging port with circular entrance, push the power button once to reset charging port. The inner ball will rotate to put the charging port into position. If the charging port is slightly off, a slight shake will move it into nosition. will move it into position.

