



Product Specifications:

Material: Silicone & ABS Battery: Lithium Battery Voltage: 3.7V Number of Vibrations: 10 User time: About 40 Munites Sound Level: < 55dp

CHARGING INSTRUCTIONS

This toy arrives with a partial charge, so it is recommended to charge fully before first use.

To charge, connect the USB plug into a power source and the DC charger into the port at the end of the toy, at the point of the shape. Initial charge will take 20 minutes, subsequent charges will take

about 40 minutes to complete. The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long

periods of time.

Charge lasts for about 50 minutes of play time on the lowest level of vibration and about 40 minutes on the highest level.

This toy operates at a sound level of less than 55db with a rechargeable lithium battery at 3.7V.



This toy has a convenient 1-button control on the front of the main toy

panel.
To turn toy on, press the button for at least 2 seconds. The light will turn on and toy will begin vibrating at its lowest

frequency.

Press the button again more quickly to cycle through 10 speeds and patterns with each press

To turn toy off, press button for at least 2 seconds.

