

## **Product Specifications:**

Material: Silicone Battery: Li battery Voltage: 3.7V Number of Speeds: 3 User time: 45 minutes at lowest level and 25 minutes at highest level Sound Level: <65DB

## CHARGING INSTRUCTIONS

CHARGING INSTRUCTIONS
This toy arrives with a high partial charge of about 75%, so it is not necessary to charge fully before first use.
To charge, connect the USB plug into a power source, and the DC charger into the port at the side of the toy's center ball. Pull up silicone flap marked DC to expose the charging port and line up the charging port with the circular entrance. Please note that the toy needs to be in a horizontal position to charge and will not line up in vertical position. Push the power button once to reset charging port. The inner ball will rotate, and the charging port will slide into position. If the charging port is slightly off, a slight shake will put it back into position.

Initial and subsequent charges will take about 2.5 hours to

Initial and subsequent charges will take about 2.5 hours to complete.

INSERT

CHARGER HERE

**USB RECHARGEABLE** 

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of

Charge lasts for about 35 minutes of play time at the highest level of vibration, and about 60 minutes at the lowest level.

This toy operates at a sound level of less
than 65db with a rechargeable lithium battery at 3.7V.

## INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at the side of its ball base. To turn toy on, press the button for at least 2 seconds. The LED light will turn on and toy will begin vibrating at its first lowest frequency. Press the button again, a single time for each new speed or function for a total of 3. To turn toy off, press button for at least 2 seconds.