

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic

Battery: Rechargeable Li-ion battery YL 751525mAh/240mAh/0.88Wh

Voltage: 3.7V

Number of Vibrations: 3 motors with 10 speeds & rhythms

User time: 120 – 140 minutes

Sound Level: <60DB



RECHARGEABLE

CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge of about 30%. It is recommended to use up this energy first before fully charging for the first time. Repeat this sequence for three battery cycles to maximize battery life.

Connect the USB plug into the USB port of your computer or other output and the other end of the magnetic DC charger onto the magnetic charging pins at the back of each wide tickler.

Initial charge will take about 70 minutes and subsequent charges will take about two hours to complete.

The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 140 minutes of play time on low vibration speeds and about 120 minutes on high vibration speeds.

This toy operates at a sound level of less than 60db with a 240mAh lithium battery at a voltage of 3.7V.

The remote control is operated with a 210mAh lithium battery at 3.7V, included. Not rechargeable.

INSTRUCTIONS FOR USE

This toy can be operated directly with the buttons on the widest feeler that are located below its charging pins, or with the three buttons on its remote control. Important note: You cannot turn the toy ON or OFF with the remote control. Use the button directly on the toy to power it on.

OPERATE WITH TOY DIRECTLY

Press the Power Button below the charging pins on the widest tickler for at least 3 seconds to turn toy on. The LED light will illuminate and the toy's motor will be in standby mode.

Press the Power Button again more quickly to cycle through 10 vibration speeds and functions (as well as standby mode) in the thin feeler and widest feeler together.

Press the function button for at least 3 seconds to control the vibration in the short feeler. Press more quickly to cycle through 10 speeds in this feeler, as well as standby mode.

Once the toy is on, you may power on the remote and use its buttons to operate vibration functions.

To turn toy off, press Power Button for at least 3 seconds.

OPERATE WITH REMOTE CONTROL

Once the toy is on by using button directly on toy, press the Power Button on the remote for at least 3 seconds to turn on the remote control. The remote controls all the motors simultaneously – you cannot operate the motors separately from the remote.

Use the Up and Down arrow buttons on remote to cycle through 10 different vibration speeds and functions, as well as standby in all ticklers at once.

Press the Power Button again for 3 seconds to put the remote and toy in standby mode (no matter what speed it's on). Turn the toy off completely by using its direct buttons.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure – Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure – Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY AND MUST BE RECYCLED

