

Product Specifications:

Category: Vibrator User: Women Material: Silicone +ABS

Material: Silicone +AGS Finish: Math Size: H: 11 W: 4.5 D: 2 cm Battery: 180mah Voltage: 3.7v Number of Vibrations: 10 speeds

User time: 60munites Sound Level: <60

CHARGING INSTRUCTIONS

This vibrator arrives partially charged, so it is recommended to fully charge before use.
Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. Initial charge will take about 90 minutes, and subsequent charges will take about 60 minutes

to complete.

The Blue LED light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long

periods of time.
Charge lasts for about 90 minutes of play time on the lowest vibration level, and about 60 minutes of play time on the highest level.

Toy vibration slows before stopping completely when charge is fully depleted.

This toy operates at a sound level of 60db and

a power level of 3.7V at 180mah.

INSTRUCTIONS FOR USE

Turn the toy on by pressing the Power Button for at least 3 seconds.

Use the same Power Button to cycle through 10 speeds and functions of vibration. Turn the toy off by pressing the Power Button for at least 3 seconds.



