

 <http://www.evolvednovelties.com/>

**EVOLVED**  
*Love is Back*



#### Product Specifications:

Category: Vibrator  
User: Women  
Material: ABS+Silicone  
Finish: Pantone 233  
Size: H:230MM W:45MM D:75MM  
Battery: Lithium polymer battery 3.7V 620mAH  
Voltage: 3.7V  
Number of Vibrations: 8 frequencies of vibration, 5 frequencies of wobble and 5 frequencies of rotation  
User time: 40 minutes -80 minutes  
Sound Level: 60dbA



**CHARGING INSTRUCTIONS:** This vibrator arrives with an 50% charge, so it can be used immediately or you can charge it to 100% before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. Initial charge will take about an hour to go from 50% to 100%, and subsequent charges with a completely depleted battery will take about 2 hours to complete. The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 80 minutes of play time on the lowest vibration level, and about 40 minutes of play time on the highest level. Toy vibration slows when charge begins to deplete. This toy operates at a sound level of 60db and with a Lithium polymer battery at 3.7V 620mAH

**INSTRUCTIONS FOR USE:** This toy has a three-button control. To turn toy on, press the Power Button (top button) for at least three seconds. The light will turn on and toy will begin vibrating at its first function at the lowest speed. Press this Power Button again quickly to cycle through 8 different frequencies. Use the Bending Button (middle button) to operate the bending function. Press this button for at least 3 seconds to start the bending motion, then press again quickly to cycle through 3 different bending speeds and functions. Press is again for 3 seconds to turn this function off.

Use the Spin Button (bottom button) to operate the spinning clitoral stimulator. Press this button for at least 3 seconds to start the spinning motion, then press again quickly to cycle through 5 different spinning speeds and functions. Press is again for 3 seconds to turn this function off. The Spin Button cycle is as follows:  
1. Middle speed clockwise rotation  
2. High speed clockwise rotation  
3. High speed counter-clockwise rotation  
4. Cycle of 1 second high speed clockwise rotation, 1 second high speed counter clockwise rotation  
5. Cycle of clockwise rotation 1 second, stop for .5 seconds (twice), then clockwise rotation for 2 seconds.

To turn toy off, press Power Button (top button) for at least 3 seconds. The light will turn off to indicate toy has powered down.

