

Product Specifications:

Material: Silicone & ABS Battery: LiCoMnNiO2 voltage: 3.7-5 V Number of Vibrations: 10 User time: 90 - 110 Minutes Sound Level: ≤60dB

CHARGING INSTRUCTIONS

ATTACH USB

CHARGER TO PRONGS

This vibrator arrives with partial charge, so it is recommended to charge for about 30 minutes before first use. It isn't necessary to fully charge before first use. Connect the USB plug into a power source and the other end of the DC charger onto the magnetic pins located at the back of the toy's handle near the base. Full

charges will take about 3 hours to complete.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 110 minutes of play time on the lowest land of vibration and 90 minutes on the highest.

level of vibration and function and 90 minutes on the highest level.

This toy operates at a sound level of 60db at a voltage of 3.7V.

INSTRUCTIONS FOR USE

This toy is operated with a 3-button panel located at the bottom front of its handle.

Press the bottom power button for at least 3 seconds to turn the toy on. The LED light will illuminate, and both motors will begin in standby mode.

Press the middle button to engage the vibration in the main shaft and rabbit stimulator simultaneously. Its light will go on and vibration will begin at its lowest speed in both motors. Press the button again to cycle through 10 speeds and patterns, including

Press the top button to engage the up and down ring function and come-hither motion simultaneously. Its light will go on and the ring movement and come-hither motion will begin at their lowest speeds. Press the button again to cycle through 3

speeds, including OFF.
Press the bottom power button again for at least 3 seconds to turn the toy off.

USB RECHARGEABLE