

Product Specifications:

Battery: 240mAH Voltage: 5V Number of vibrations: 10 User time: 60 - 90 Minutes Sound level: <50DB

Material: Silicone & ABS


CHARGING INSTRUCTIONS
It is recommended to fully charge this toy before use.
Connect the USB plug into a power source and the other end of the DC charger onto toy's magnetic charging pins.
Initial charge will take about 30 minutes and subsequent charges will take about 1 hour to complete.

Initial charge will have upon so minimos and subsequents and become solid when toy is fully charged. There is no danger of bottery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 1 hour and 30 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level.

This toy operates at a sound level of less than 50db with a 240mAH lithium battery at a voltage of SV

of 5V.
The remote control uses a CR2032 battery, included.

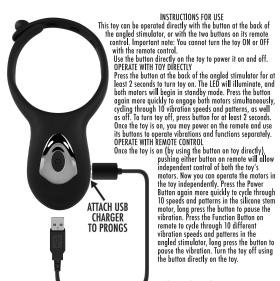

USB RECHARGEABLE