

## **Product Specifications:**

Material: Silicone & ABS Plastic Battery: Li battery, 801520, 3.7V 200mAh Voltage: 3.7V Number of Vibrations: 7 User time: 100 - 120 minutes Sound Level: ≤60DB

## **CHARGING INSTRUCTIONS**

This vibrator arrives with high partial charge of 75% so it is not necessary to charge before first use. If you choose to charge it, initial charge will take about an hour, and subsequent charges will take about 2 hours to complete.

To charge, connect the USB plug into a power source and the other end of the DC charger port located at the side of the tickler. The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 120 minutes of play time on the lowest level of vibration and function and 100 minutes on the highest level. This toy operates at a sound level of 60db with a 200mAh battery at a voltage of 3.7V.

## INSTRUCTIONS FOR USE

This toy has a 1-button control at the side of its "tickler". To turn toy on, press the button for at least 2 seconds. The LED light will turn on and toy will begin vibrating at its lowest speed. Press the button again more quickly to cycle through 7 speeds and patterns. To turn toy off, press button for at least 2 seconds.

