



Product Specifications:

Material: Liquid Silicone & ABS Battery: 802025 - 350mah

 
Voltage: 3.7V

Number of Vibrations: 10

User time: 40 - 50 Minutes Sound Level: ≤60DB

CHARGING INSTRUCTIONS
This vibrator arrives partially charged, so it is recommended to charge it before first

use.
Connect the USB plug into a power source and the other end of the DC charger into toy's input on the side of the shaft under the head.
The initial charge will take about half an hour and subsequent charges will take about 90 minutes to complete.
The LED light will flash on the toy while the device is charging and remain solid when fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 50 minutes of play time on the highest level.





INSTRUCTIONS FOR USE
This toy must be turned on with the button directly on toy. Once toy is on, it can be operated with the same button directly, or with the remote control. TO OPERATE WITH TOY DIRECTLY:
Turn the toy on by pressing the single button under the head of the toy for at least 3 seconds. The button will light up and the toy will enter standby mode. Use the same Power Button to cycle through 10 speeds and functions of vibration.

Turn the toy off by pressing the button for at least 3 seconds.

TO OPERATE WITH REMOTE CONTROL: Once the toy is turned on with its own button, turn on the remote control by button, turn on the remote control by pressing its Power Button for at least 3 seconds. Use the Function Button to cycle through 10 speeds and functions of vibration. Turn the remote control off by pressing the Power Button for at least 3 seconds.

USB RECHARGEABLE