

**Product Specifications:** 

Material: Silicone, ABS, & TPE Battery: built-in Li battery Voltage: 3.7V Number of Vibrations: 10 User time: 35 - 70 Minutes Sound Level: ≤60DB

## CHARGING INSTRUCTIONS

It is not necessary to charge toy before first use. Initial charge will take about 1 hour; subsequent charges about 2 hours. Charge lasts for 35 minutes of playtime at the highest speed and 70 minutes at the lowest speed.

fully charged. voltage of 3.7V.

**USB RECHARGEABLE** 

INSERT Charger Here

To charge, connect the USB plug into a power source and the DC charger into the charging port on the toy's base. The indicator light will flash while device is charging and stay constant when toy is This toy operates at a sound level of less than 60db with a rechargeable lithium battery at a

## INSTRUCTIONS FOR USE

1. Press the button on the toy's handle for 2 seconds to turn toy on. The button will light up and

toy will begin vibrating at its first lowest frequency.
2. Press button again for 0.5 seconds at a time to cycle through 10 speeds and patterns.

3. To turn toy off, press button for at least 2 seconds.