

Product Specifications:

Material: Silicone Battery: 800mAh

Voltage: 3.7V

Number of Vibrations:

10 vibrations, 3 thrusting User time: 60 - 120 Minutes

Sound Level: ≤60db

CHARGING INSTRUCTIONS
It is recommended to fully charge this toy before first use. Initial charge will complete in about 2 hours. Subsequent charges will complete in about an hour. Connect the USB cable to a power source at one end and place the other end onto the magnetic charging pins at the back of the toy's base. A flashing indicator light means the toy is charging; a solid light means it's finished. Battery charge lasts for about 2 hours on the lowest frequency, and about 1 hour on the highest frequency. This toy operates at a sound level of less than 60db with an 800mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE
1. Locate the 2-button control panel at the base of the handle.

2. Press the top thrusting button (parallel lines symbol) for 3 seconds to turn on the thrusting function in the shaft. The light will turn on and the motor will begin at its lowest speed. Press the button again more quickly to cycle through 3 thrusting speeds & patterns. To turn thrusting off, press the button for 3 seconds.

3. Press the bottom vibration button (squiggly line) for 3 seconds to turn on the vibration function in the shaft. The light will turn on and the motor will begin at its lowest speed. Press the button again more quickly to cycle through 10 vibrating speeds & patterns. To turn vibration off, press the button for 3 seconds. begin at its lowest speed. Press

