

Product Specifications:

Material: Silicone Battery: Li-ion battery YL751525,240mAh,0.88Wh,4.7g Voltage: 3.7V

Number of Vibrations: 11
User time: 35 – 50 Minutes
Sound Level: <60DB

CHARGING INSTRUCTIONS

It is recommended to use up the existing battery power first before charging to prolong battery life. A full charge will take about 90 minutes. Charge lasts for 35 minutes

of playtime at the highest speed and 50 minutes at the lowest speed.
To charge, connect the USB plug into a power source and the DC charger into the charging port at the back of the toy's base. The indicator light will flash while device is charging and stay constant when toy is fully charged.

This toy operates at a sound level of less than 60db with a rechargeable 240mAh lithium battery at a voltage of

3.7V.

INSERT CHARGER HERE

USB RECHARGEABLE

INSTRUCTIONS FOR USE

1. Press the button at the toy's base for 2 seconds to turn toy on. The button will light up and toy will begin vibrating at its first lowest frequency.

2. Press button again for 0.5 seconds at a time to cycle through 11 speeds and patterns.

3. To turn toy off, press button for at least 2 seconds.