# **PLAYBOY**

# *Pleasure*

**Product Specifications:** 

Material: Silicone & ABS Battery: 902030/500mAh Voltage: 3.7V Number of Vibrations: 7 User time: 80 - 90 Minutes Sound Level: ≤50dB



RECHARGEABLE

### CHARGING INSTRUCTIONS

CHARGING INSTRUCTIONS
This toy arrives with a high partial charge of 70% so it is not necessary to charge before first use. Charging takes about 2.5 hours to complete.

To charge, connect the USB plug into a power

To charge, connect the USB plug into a power source, and the DC charger onto the magnetic charging pins at the base of the come-hither shaft. The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 80 minutes of play time at the highest level of vibration, and about 90

at the highest level of vibration, and about 90 minutes at the lowest level. This toy operates at a sound level of less than 50db with a rechargeable 500 mAh lithium battery at 3.7V.

## INSTRUCTIONS FOR USE

This toy has a 1-button control at the base of the come-hither shaft, below the magnetic

charging pins.

To turn toy on, press the button for at least 3 seconds. The LED light will turn on and both motors will begin at their first lowest frequency. Press the button again, a single time for each new speed or rhythm for a total of 7.

To turn toy off, press button for at least 3 seconds. LED will turn off and both motors will stop.

- VIBRATOR CARE INSTRUCTIONS

  1. Compatible with Playboy Pleasure Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.

  2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.

  3. Clean your vibrator after every use with Playboy Pleasure Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.

  4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

