

## **Product Specifications:**

Material: Silicone & ABS Battery: Lithium battery Voltage: 3.7V Number of Vibrations: 10

User time: 45 - 65 Minutes Sound Level: <45db

## **CHARGING INSTRUCTIONS**

INSERT / Charger Here

It is recommended to charge this toy before first use. Initial charge will take about 2 hours, subsequent charges about 90 minutes. Charge lasts for about 65 minutes of play time at the lowest speed,

and 45 minutes at the fastest speed.

To charge, connect the USB plug into a power source and the DC charger into the port at the base of the toy's handle. The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

This toy operates at a sound level of less than 45db with a rechargeable lithium battery at a voltage of 3.7V.

## INSTRUCTIONS FOR USE

- 1. Press the button at the toy's base for 2 seconds to turn the toy on. The button will light up and toy will begin vibrating at its first lowest frequency.
- 2. Press button again to cycle through 3 speeds & 7 patterns.
- 3. To turn toy off, press button for at least 2 seconds. Vibration will stop and light will turn off.

USB RECHARGEABLE