

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: Silicone & ABS

Battery: lithium polymer

Voltage: 3.7V

Number of Functions: 7

vibrating, 3 swaying

User time: 45 - 60 minutes

Sound Level: 45 DB

CHARGING INSTRUCTIONS

It is recommended to charge this toy for at least 30 minutes before first use. To charge, plug the USB cable into a power source and the DC end onto the magnetic charging pins at the bottom of the toy's base. Initial charge will take about 30 minutes; subsequent charges about 160 minutes to complete. The indicator light will flash while device is charging and stay constant when toy is fully charged. The remote control can also be charged with magnetic USB, using the same directions, but it's not necessary to charge the remote before use. Charge lasts for 45 minutes of playtime at the highest speed and 60 minutes at the lowest speed. This toy operates at a sound level of less than 45db with a rechargeable battery at a voltage of 3.7V.

INSTRUCTIONS FOR USE

1. This toy has a 1-button panel at the bottom of the toy's base, and a 2-button remote control. The vibration and waving motors operate together with the toy's button, and separately or together with the remote's buttons.
2. Press the toy's button for 2 seconds to turn the toy on. The light will turn on and both motors will begin in standby. Press again more quickly to cycle through 7 speeds and patterns of vibration and waving simultaneously. Note that the highest waving speed will accompany frequencies 4 through 7. Press button again for 2 seconds to turn the motors off. The light will turn off, vibration and waving will cease.
3. Use the remote to operate vibration and waving independently. Once the toy is in standby, press the top vibration button for 2 seconds to engage vibration in the shaft. Press it more quickly to cycle through 7 speeds and patterns, and standby. Press again for 2 seconds to put the vibration function back into standby.
4. Press the bottom waving button for 2 seconds to engage waving at the base of the shaft. Press it more quickly to cycle through 3 speeds of waving, and standby. Press for 2 seconds to put the waving function into standby.
5. Use the toy's button to turn off the toy completely.

