

## **Product Specifications:**

Material: Silicone & ABS

Battery: 902040 Voltage: 3.7V

Number of Vibrations:

10 vibrating, 3 come hither

User time: 45 - 60 Minutes Sound Level: ≤60dB

## CHARGING INSTRUCTIONS

CHARGING INSTRUCTIONS
It is recommended to charge before first use. Initial charge will take about 1 hour, subsequent charges about 90 minutes. Charge lasts for 45 minutes of playtime at the highest speed and 60 minutes at the lowest speed. To charge, connect the USB plug into a power source and the DC charger into the charging port at the back base of the main shaft. The indicator light will flash while device is charging and stay constant when toy is fully charged.

This toy operates at a sound level of less than 60db with a rechargeable lithium battery at a voltage of 3.7V.

voltage of 3.7V.

INSTRUCTIONS FOR USE

1. The control panel is located at the back of the toy's main shaft.

toy's main snarr.

2. Press the top power button for 2 seconds to turn toy on. The button will light up and all toy motors will begin in standby.

3. Press the power button again more

quickly to engage vibration in the shaft and press again to cycle through 10 speeds and patterns of vibration.

4. Press the second button from the 4. Press the second button from the top to inflate the 'wearable' end (small shaft). It will keep inflating as long as you press the button, stopping automatically at its maximum capacity. Lifting your finger off the button stops inflation.

5. Press the third button down to deflate the small shaft.

6. Press the bottom button to engage the 'come hither' motor in the main shaft and cycle between its 3 modes.

7. To turn the toy off, press the power button for at least 2 seconds. The lights will turn off and all motors will

lights will turn off and all motors will

