

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS
Battery: 700mAh
Voltage: 5V
Number of Vibrations: 10
User time: 45 - 60 Minutes
Sound Level: <50dB



USB
RECHARGEABLE

CHARGING INSTRUCTIONS

It is recommended to charge fully before use. To charge, connect the USB plug into a power source at one end, and the magnetic DC charger onto the magnetic charging pins at the back of the handle below the black chrome plate. The indicator light will flash while device is charging and stay constant when toy is fully charged. Initial charge will take about an hour to complete, subsequent charges about 2.5 hours.

Charge lasts for about 50 minutes of play time at the highest level and about 60 minutes at the lowest level. This toy operates at a sound level of less than 50db with a rechargeable 700mAh lithium battery at 5V.

INSTRUCTIONS FOR USE

1. The control panel is located at the front of the toy's handle, beneath the curly shaft.
2. Press the middle button for 3 seconds to turn toy on. The buttons will light up and motors will begin in standby.
3. Press the bottom button to engage vibration in the curly shaft. It will begin at its lowest speed. Press again to cycle through 10 vibrating speeds and rhythms. Press for 3 seconds to return to standby.
4. Press the top button to engage vibration in the main shaft. It will begin at its lowest speed. Press again to cycle through 10 vibrating speeds and rhythms. Press for 3 seconds to return to standby.
5. To turn the toy off, press the middle button for 3 seconds. The light will turn off and both motors will cease.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

