

Product Specifications:

Material: Liquid Silicone & ABS Battery: Li-ion Battery Voltage: 3.7V Number of Vibrations: 10 User time: 60 - 90 Minutes Sound Level: <45 db

CHARGING INSTRUCTIONS

It is recommended to charge this toy before first use. Initial charge completes in about 1 hour, subsequent charges in 90 minutes. Connect the USB cable to a power source at one end and connect the other end into the charging port at the toy's base. An indicator light flashes while charging, then becomes solid when charge is complete.

Battery charge lasts for about 90 minutes on the lowest frequency, and about 60 minutes on the highest frequency. Sound level reaches 45db and toy operates at 3.7V.

INSTRUCTIONS FOR USE 1. Press the button at the toy's base for 2 seconds the true toy on The button.

INSERT CHARGER HERE 1. Press the button at the toy's base for 2 seconds to turn toy on. The button will light up and toy will begin vibrating at its lowest frequency.
2. Press button again for 0.5 seconds at a time to cycle through 3 speeds and 7 patterns.
3. To turn toy off, press button for at least 2 seconds. Vibration will cease and light will turn off.

USB RECHARGEABLE