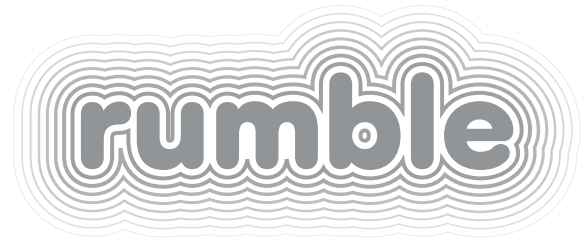


bodywand®



## Rumble Wand



12" Rumble Wand    10" Rumble Wand    8" Rumble Wand



 
### Device Controls



- Power Button / Vibration Patterns Control
- + Increase Power level
- Decrease Power level

 
### HOW TO USE

#### • DEVICE POWER ON/OFF

Hold the  button for 3 seconds to turn your device on or off. The device will vibrate immediately once turned on.

#### • VIBRATION PATTERNS

There are 5 adjustable vibration patterns.

To adjust the vibration modes, press the  button on your device to cycle through each mode.

#### • VIBRATION LEVELS

**12" Rumble Wand** has 7 adjustable vibration Levels.

**10" & 8" Rumble Wands** have 5 adjustable vibration Levels.

Press the **+** button on your device to Increase power levels.

Press the **-** button on your device to decrease power levels.

### HOW TO USE

#### • CHARGING THE DEVICE

Plug in the charging port on the bottom of the wand using the included USB Pin charging cable.

The device will not function while charging, unplug the charger before using the device.

**Flashing LED Light:** Item is charging

**Solid LED Light:** Item is fully charged.

**12" Rumble Wand** takes approx 180 minutes of charge for up to 70 minutes of use.  
**10" & 8" Rumble Wands** take approx 110 minutes of charge for up to 100 minutes of use.

#### • TRAVEL LOCK

Simultaneously press and hold the **+** and **-** buttons for 3 seconds. Flashing light will indicate the massager is locked.

To unlock, simultaneously press and hold the **+** and **-** buttons for 3 seconds. Flashing light will indicate the massager is locked.

### CLEANING, STORAGE & SAFETY

Always clean and dry your device thoroughly before and after use.  
**DO NOT** store wet. We recommend that you use a mild cleanser that is suitable for use with silicone items.

Clean the device with a soft, damp cloth.  
**DO NOT** clean with an alcohol or chemical-based cleaner.  
Use water based lubricant as desired.

**Not compatible with silicone lubricant.**

Avoid leaving your device in direct sunlight and never expose it to extreme heat.

Keep away from water, and never immerse it.

Front

## WARNING

### For adult use only. For external use only.

Any individual who may be pregnant, has a pacemaker, suffers from diabetes, phlebitis and/or thrombosis, is at an increased risk of developing blood clots, or who has pins/screws/artificial joints or other medical devices implanted in his/her body should consult with a physician before using a massaging device designed for home use.

Bodywand shall not be liable for incidental or consequential damages resulting from the misuse of this product.

## SPECIFICATIONS

|                  | 12"RUMBLE WAND      | 10"RUMBLE WAND    | 8"RUMBLE WAND   |
|------------------|---------------------|-------------------|-----------------|
| <b>Size:</b>     |                     |                   |                 |
| Tamaño:          | 295 x 57.5 x 57.5mm | 245.7 x 50 x 50mm | 208 x 43 x 43mm |
| Taille:          |                     |                   |                 |
| Größe:           |                     |                   |                 |
| <b>Weight:</b>   |                     |                   |                 |
| Peso:            | 536g                | 285g              | 236g            |
| Poids:           |                     |                   |                 |
| Gewicht:         |                     |                   |                 |
| <b>Material:</b> |                     |                   |                 |
| Material:        |                     | ABS + Silicone    |                 |
| Matériau:        |                     | ABS + Silicone    |                 |
| Material:        |                     | ABS + Silikon     |                 |
| <b>Battery:</b>  |                     |                   |                 |
| Batería:         | 1000mAh             | 700mAh            | 700mAh          |
| Batterie:        |                     |                   |                 |
| Akku:            |                     |                   |                 |

## SPECIFICATIONS

### POWER:

**12"RUMBLE WAND:** 7.4V 1000mAh USB2.0

**10"RUMBLE WAND:** 3.7V 700mAh USB2.0

**8"RUMBLE WAND:** 3.7V 700mAh USB2.0

### WATERPROOF:

IPX5 Splashproof

### BATTERY LIFE:

**12"RUMBLE WAND:** 180 minutes for up to 70 minutes of use.

**10"RUMBLE WAND:** 110 minutes for up to 100 minutes of use.

**8"RUMBLE WAND:** 110 minutes for up to 100 minutes of use.

## DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

### XGEN, LLC

Horsham, PA 19044 All Rights Reserved

[www.thebodywand.com](http://www.thebodywand.com)

### UK Responsible Person:

ArangaRanga UK LTD, 20-22 Wenlock Road, London, N17 GU, UK.

Phone: +44 2037692960,

E-Mail: [UKresponsibleperson@arangaranga.com](mailto:UKresponsibleperson@arangaranga.com)

### EU Responsible Person:

ArangaRanga SL, Paseo de la Castellana 194, Madrid, 28046, Spain.

Phone: +34 910054258,

E-Mail: [EUresponsibleperson@arangaranga.com](mailto:EUresponsibleperson@arangaranga.com)

Email us at [sales@xgenproducts.com](mailto:sales@xgenproducts.com) for any unanswered questions

Back